Fisher-Price®

W9913

Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).

www.fisher-price.com

Important Information

⚠ WARNING

Prevent Entanglement Injury

Crib Mobile Use

- Keep out of baby's reach.
- Remove mobile from crib or playpen when baby begins to push up on hands and knees.
- This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.

Stroller Toy Use

- Do not attach link directly to crib or playpen.

⚠ CAUTION

This package contains small parts in an unassembled state.
Adult assembly is required.

- Use as a mobile from birth until 5 months.
- A mobile is intended for visual stimulation and not to be grasped by a child.

Assembled Parts

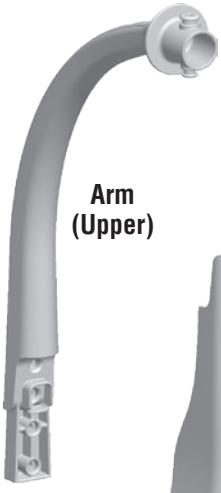

Arm
(Upper)

Arm
(Lower)

Giraffe

Mobile Link Cover

Mobile Link

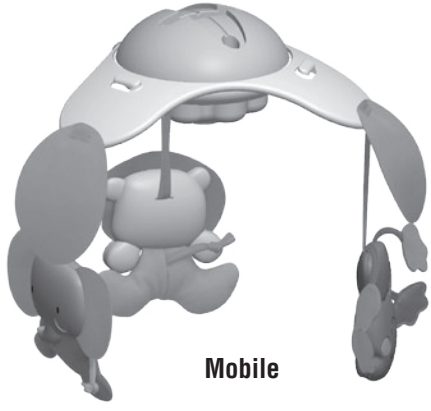

Mobile

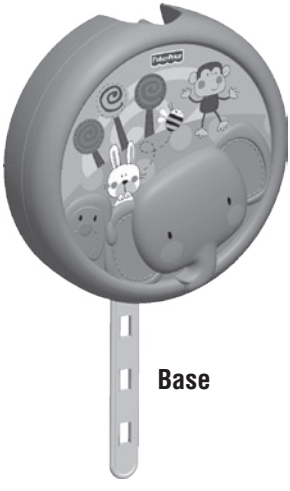

Base

M3,5 x 15 mm Screw – 5

Screw is shown actual size.

Tighten all screws with a Phillips screwdriver. Do not over-tighten the screws.

Assembly

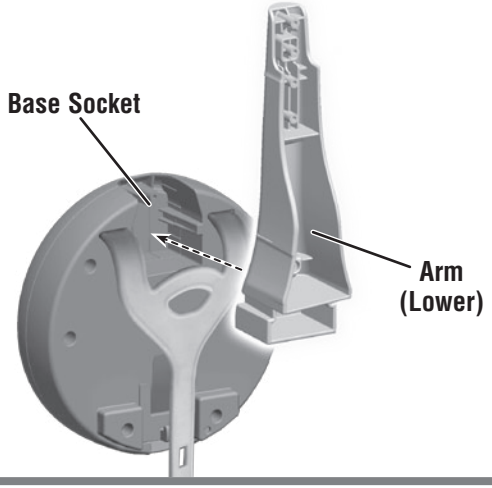

1

• Fit the lower arm into the socket in the back of the base.

Hint: *You may need to pull the attachment strap on the base down to fit the arm in the base.*

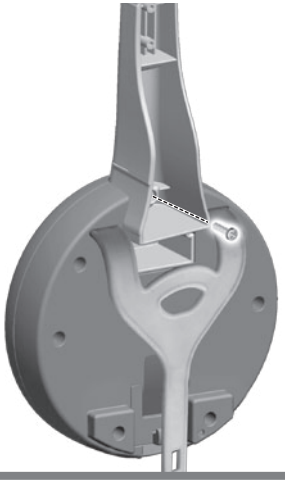

2

• Insert a screw into the lower arm and tighten.

Assembly

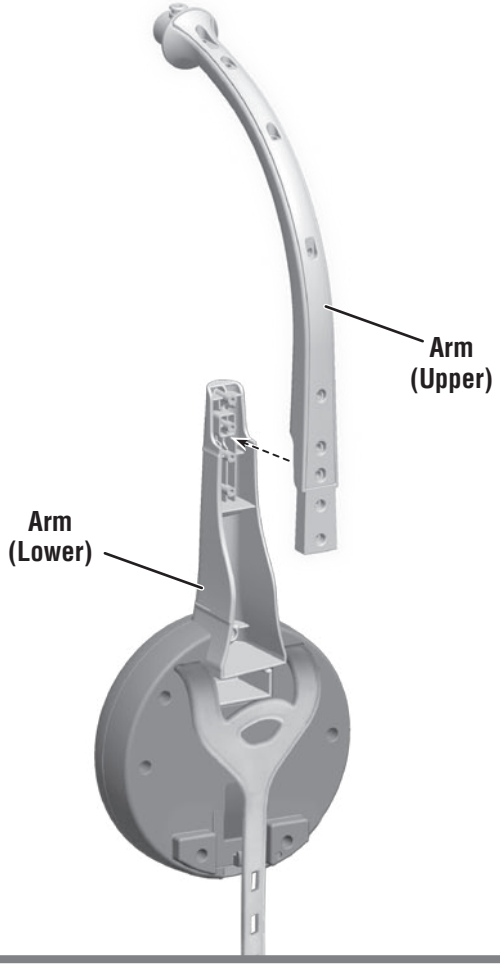

3

• Fit the upper arm to the lower arm.

Assembly

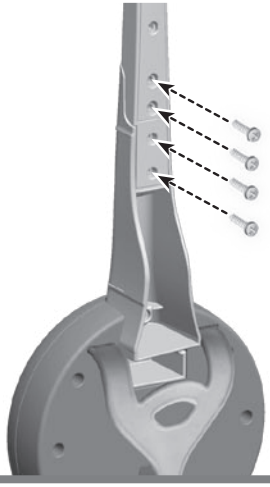

4

• Insert four screws into the arm assembly and tighten.

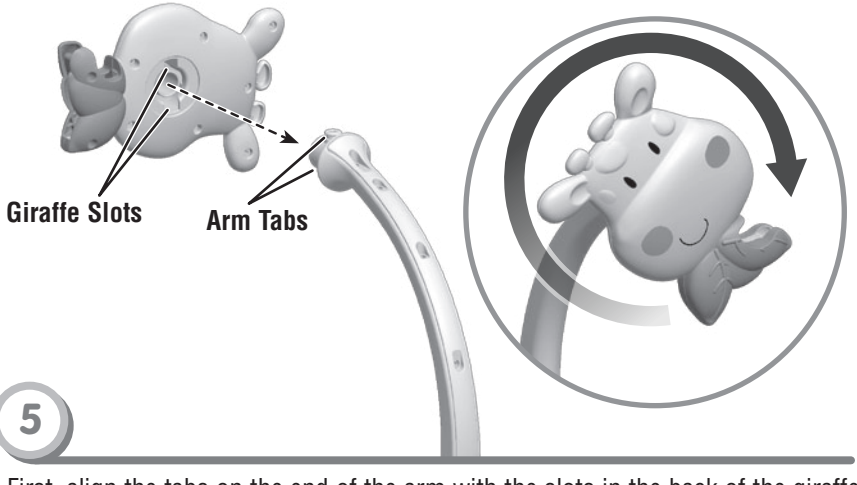

5

• First, align the tabs on the end of the arm with the slots in the back of the giraffe.
• Then, turn the giraffe to **"snap"** in place on the end of the arm.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2011 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Assembly

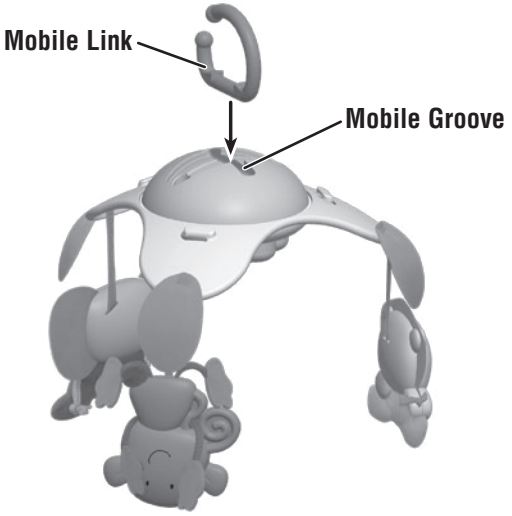

6

• Fit the flat end of the mobile link into the groove in the mobile.

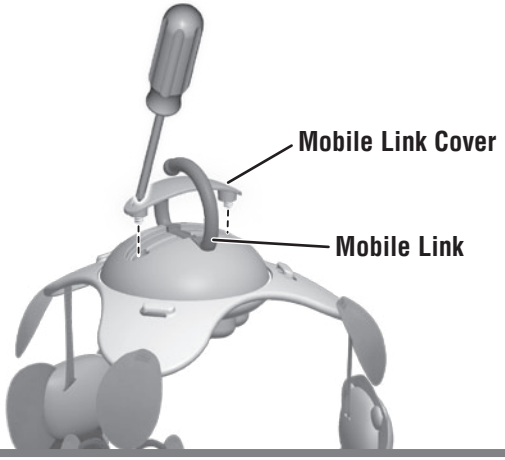

7

• Fit the mobile link cover onto the top of the mobile.

• Tighten the screws.

Hint: *The screws are assembled to the mobile link cover.*

Assembly

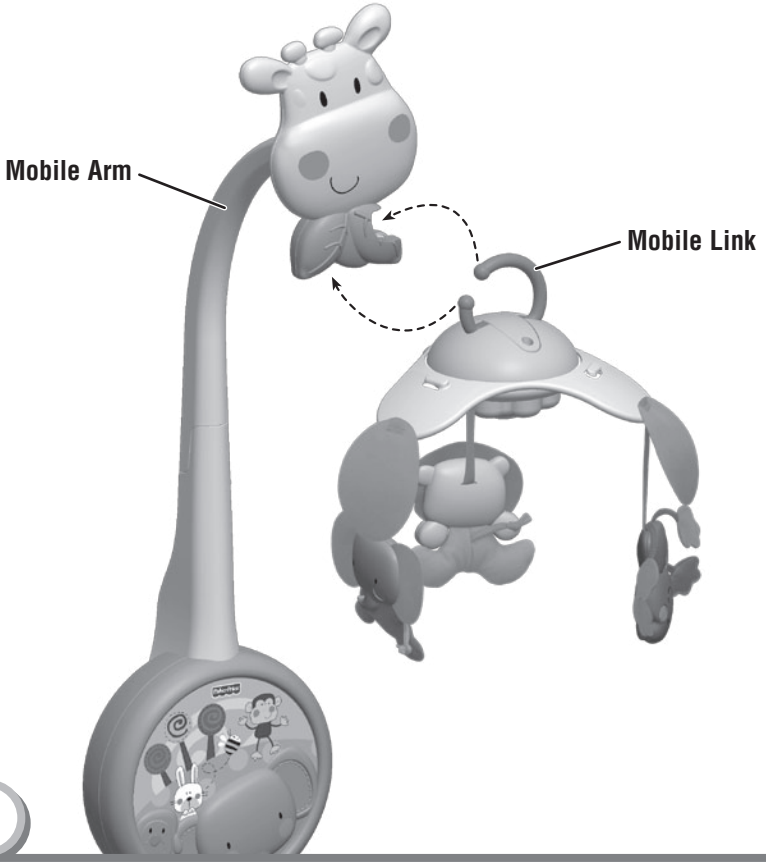

8

- Fit the ends of the mobile link onto the mobile arm.
- Push to **"snap"** the link in place.

Mobile Use Crib Attachment

IMPORTANT! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Do not add additional strings or straps to attach to a crib. Check frequently.

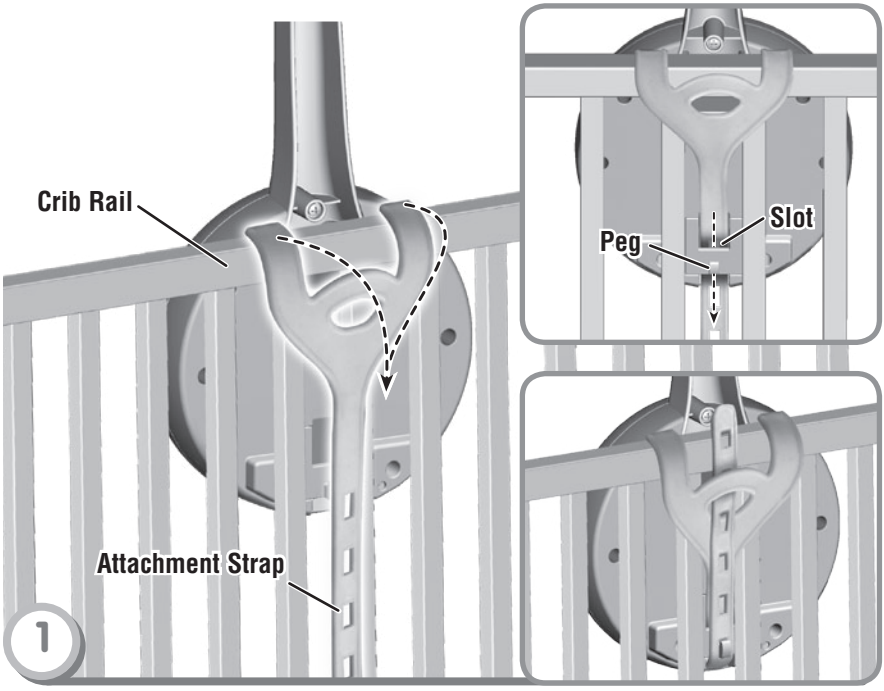

- Position the toy inside the crib.
- Wrap the toy's attachment strap around the crib top horizontal rail.
- Slide the end of the attachment strap through the slot on the back of the toy.
- Pull the end of the attachment strap up and fasten to the slot on the peg on the back of the toy.

Note: This toy should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.

- If you have excess strap, slide the free end of the attachment strap under the slot at the top of the attachment strap.

Mobile Use Crib Attachment

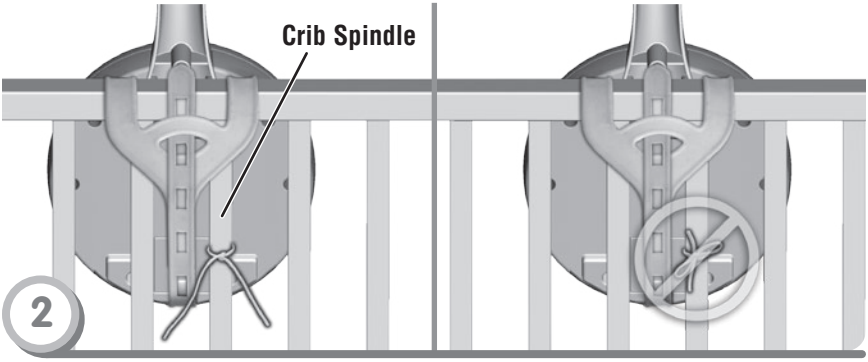

• Tie the toy's strings to a crib spindle.

Note: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

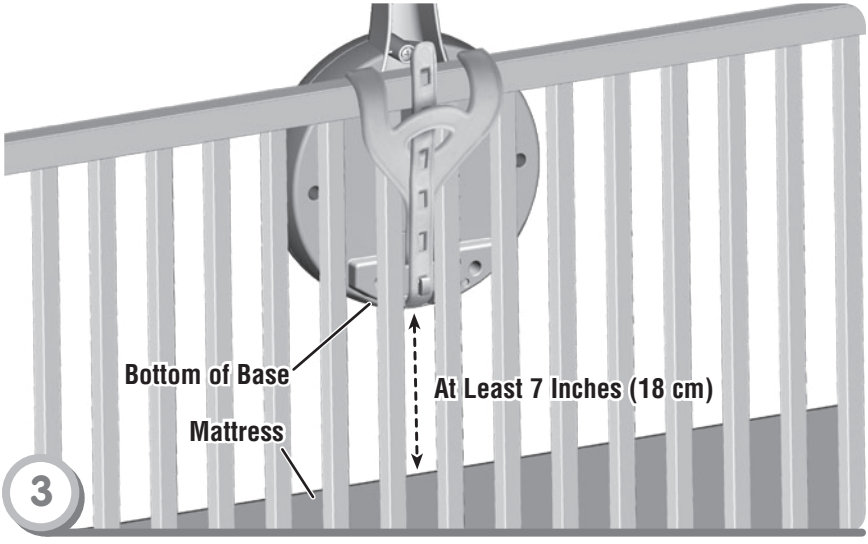

• Make sure the distance between the bottom of the product and the crib mattress is **at least 7 inches (18 cm)**.

• If the distance is less than 7 inches (18 cm): readjust the attachment straps to lift the product; or lower the crib mattress.

Musical Crib Mobile

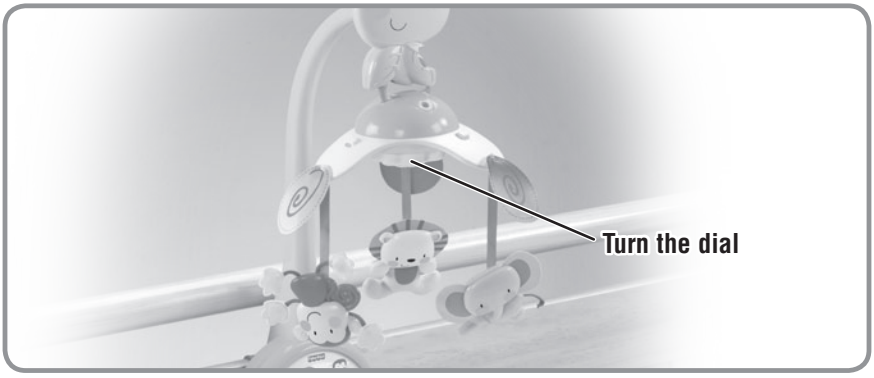

- Turn the dial on the bottom of the mobile clockwise for a musical tune. Do not over-wind the dial.

Stroller Link Toy

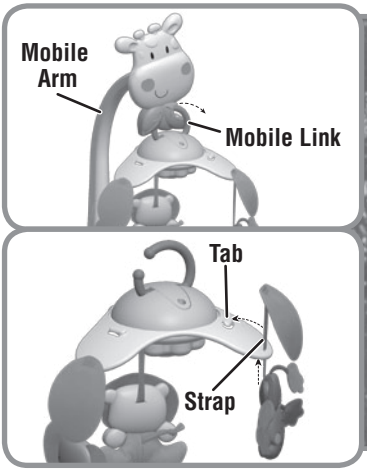

- Pull the mobile link off the mobile arm to use as a stroller toy!
- Shorten the toy straps. Pull the toy straps up and then under the tabs on top of the toy.
- Fit the open end of the mobile link onto a stroller canopy.
- Turn the dial on the bottom of the mobile clockwise for a musical tune. Do not over-wind the dial.

CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Care

- Wipe this toy with a clean, damp cloth. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.